

Thank you for choosing a Meliconi remote control.

Keep this booklet for future reference.

The **Speedy 210 combo** remote control can control a **TV** (analogue or digital) and can also simultaneously control a decoder if one is connected to it (terrestrial or satellite).

Thanks to its combined keypad, there is no need to manually select the device to be controlled. Using **Speedy 210 combo** to control both devices (**TV + DECODER**), the **light blue** buttons automatically control the **TV**, and the **dark blue** buttons control the **DECODER**, but it is also possible, with suitable settings, to make all of the buttons control a single device.

The remote control has a permanent memory, so it does not lose its settings even if there are no batteries in it. Its ergonomic shape and soft rubber body make it easy to grip and protect the remote control if it is knocked and dropped.

IMPORTANT: The remote control must not be exposed to excessive heat sources.

USE OF THE BUTTONS AND FUNCTIONS

The functions of the buttons described below are available only if they are on your original device.

Selects the next programme.

TV ON button, sometimes needed to switch on the TV.

Indicator light.

Menu options confirm button

Turns up the TV volume.

Turns down the TV volume.

Menu options exit button

Numeric keypad.

Selects the previous programme.

Selects digital TV and radio

For selecting an external input source for the TV.

Button for exiting Teletext and returning to normal screen.

Teletext button.

OFF for switching off the decoder (STB).

ON/OFF switches the TV OFF and in some cases ON.



Before using the remote control, insert the batteries and programme it.

INSERTING THE BATTERIES

The remote control requires 2 new 1.5V alkaline **AAA/LR03** batteries. Insert them as illustrated.

Try pressing a number button and check that the red light remains lit continuously until you release the button. If the light flashes, the batteries inserted are not charged and are about to go flat, therefore you must substitute them.



Do not leave flat batteries inserted, as liquid may leak and damage the remote control

SETTING THE CODE

The **Speedy 210 combo** remote control is a universal remote, so its memory contains data relating to numerous devices of various brands available on the market.

Each original device has a **specific code** which must be used to set up the remote control.

Therefore, to use **Speedy 210 combo** you **must** enter the specific code for each device you want to control.

Use one of the following methods to identify the correct code and set it in your remote control:

- A)** - INTERNET (recommended)
- B)** - MOBILE PHONE (SMS)
- C)** - MANUAL SEARCH

A

SETTING CODES USING INTERNET

If you have an Internet connection available, follow the on-line guide on the www.meliconi.com/guida website to identify the specific codes for the devices you want to control. Then set the codes manually in your **MELICONI** remote control as described in the **ENTERING THE CODE DIRECTLY** procedure.

 
B

SETTING CODES USING A MOBILE PHONE

*(the service is free, the only cost being that of sending the **SMS**, which depends on your service operator tariffs)*

From today, MELICONI gives customers who don't have internet access the chance to receive the codes for programming their remote control directly on their mobile phone.

Send an **SMS** as follows:

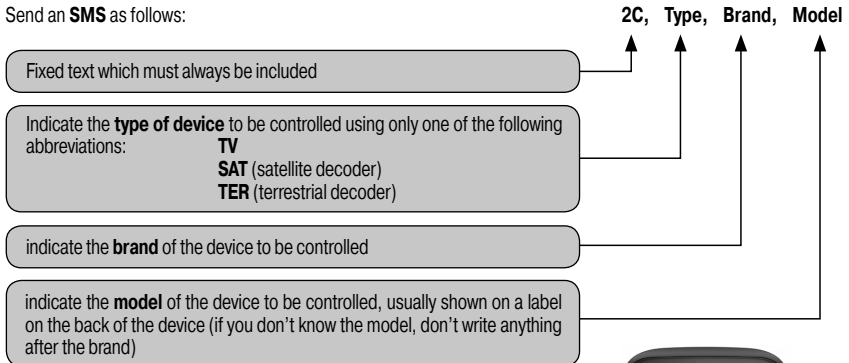

EXAMPLE:
2C, TV, PHILIPS, 32PFL3614



IMPORTANT - separate the information with a **comma**, and be as **precise as possible** so that the IT system can search the data and respond correctly.

Send the **SMS** to the number **0039 345 7518893** and wait for an **SMS** reply.

Once you have received the **SMS** with the list of codes, set the first code in the remote control as described in the **ENTERING THE CODE DIRECTLY** section.

Place the **MELICONI** remote control in front of the device, which should already be ON, and press the **TV** or **ON/OFF STB** button (depending on the device being operated). If the device does **NOT** switch off, try setting the next code in the **SMS** list on the remote control. When the device reacts, check whether the other buttons are operating correctly too. If they do, the remote control is ready to use. If they don't, you are probably using an incorrect code intended for a very similar device. At this point, ignore the SMS list and consult the **MANUAL CODE SEARCH** section to find a more suitable code.

NOTE: If you don't receive an SMS on your mobile phone or if the message says **ERROR / NO CODE**, it means the system was not able to process the data you sent. **Do not try sending another SMS**, instead set the code using the **MANUAL CODE SEARCH** procedure.

C

MANUAL CODE SEARCH

(only to be performed if the specific code could not be found)

If you want to use the **Speedy 210 combo** to simultaneously control two different devices (TV + DECODER) follow procedure **C1** then procedure **C2**.


To control a single device (DECODER), follow only procedure **C2**.

To control a single device (DIGITAL/ANALOGUE TV), follow procedure **C3**.

If the manual search for the code is successful, obtain the code in use by following the **DISPLAY CODE IN USE** procedure and make a note of it inside the battery cover.

C1. MANUAL SEARCH (TV)

1. Switch on the TV and select a programme
2. Simultaneously hold down the VOL + and VOL - buttons.
3. When the indicator light starts flashing, release the buttons and briefly press the ON/OFF TV button.

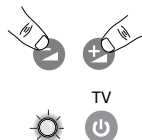

4. The indicator light flashes faster; the remote control is ready for the search.



5. Point the remote control at the TV. Slowly press and release the ON/OFF TV button several times, stopping when the TV is switched off (you may need to press the button several dozen times).



6. When the device has switched off press the **OK** button. Three long flashes indicate that the operation was completed correctly.



Check that the other buttons (light blue) correspond to the functions of the original remote control; if not, it is likely that the code found is incorrect, but is used for a very similar device, therefore repeat the procedure from point 2

C2. MANUAL SEARCH (DECODER)

1. Switch on the device and select a programme.
2. Simultaneously hold down the P+ and P- buttons.
3. When the indicator light starts flashing, release the buttons and briefly press the ON/OFF STB button.
4. The indicator light flashes faster; the remote control is ready for the search.
5. Point the remote control at the device. Slowly press and release the ON/OFF STB button several times, stopping when the decoder is switched off (you may need to press the button several dozen times).
6. When the device has switched off press the **OK** button. Three long flashes indicate that the operation was completed correctly.



Check that the other buttons (dark blue) correspond to the functions of the original remote control; if not, it is likely that the code found is incorrect, but is used for a very similar device, therefore repeat the procedure from point 2.

C3. MANUAL SEARCH (DIGITAL/ANALOGUE TV)

1. Switch on the TV and select a programme.
2. Simultaneously hold down the VOL + and P+ buttons.
3. When the indicator light starts flashing, release the buttons and briefly press the ON/OFF TV button.
4. The indicator light flashes faster; the remote control is ready for the search.
5. Point the remote control at the TV. Slowly press and release the ON/OFF TV button several times, stopping when the TV is switched off (you may need to press the button several dozen times).
6. When the TV has switched off press the **OK** button. Three long flashes indicate that the operation was completed correctly.



Check that the other buttons correspond to the functions of the original remote control; if not, it is likely that the code found is incorrect, but is used for a very similar device, therefore repeat the procedure from point 2.

NOTE: During the search the indicator stops flashing and the remote control exits the programming mode in the following cases:

- if for 12 seconds the button indicated is not pressed or if another button is pressed
- if the list of codes to find is terminated. If this happens, go to the www.meliconi.com website

ENTERING THE CODE DIRECTLY

(only to be performed if you know the specific code to be set)

To go to the programming mode, according to requirements, use one of the following pairs of buttons:

- VOL +** and **VOL -** to set the code for the TV part only - (light blue buttons)
P + and **P -** to set the code for the DECODER part only - (dark blue buttons)
VOL + and **P +** to set a single code and control only one device - (whole keypad)

1. Switch to the programming mode by simultaneously holding down the appropriate pair of buttons.



2. When the indicator light starts flashing, release the buttons and immediately enter the specific code previously found. (e.g.: 1306)




Three long flashes indicate a correct setting. If they do not appear, repeat the procedure.

DISPLAY CODE IN USE


If you set up the remote control using the **MANUAL SEARCH** procedure, obtain and make a note of the code in use as follows:

1. Simultaneously hold down the VOL+ and VOL- buttons (if you want to find the codes of analogue or digital TVs), or P+ and P- (to find the decoder code).

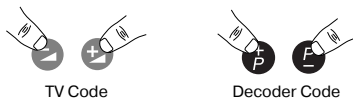

2. When the indicator light starts flashing, release the buttons and briefly press the **TV/RADIO** button.

3. After a pause of several seconds, the indicator light produces four sets of flashes, spaced out, corresponding to the code to be obtained. Count the number of flashes. Each set of flashes corresponds to one figure in the code. Ten flashes correspond to the figure 0. For example, for the code 1306 the following flashes will be obtained:

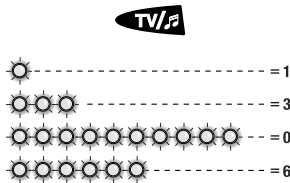

Code obtained = 1306

Make a note of the code obtained on the label on the inside of the battery cover. You may need it in future.

TROUBLESHOOTING

PROBLEM

The device does not respond and the indicator light does not come on when a button is pressed

The device does not respond but the indicator light comes on.

When you press a button the indicator light flashes and the device does not respond to commands.

The remote control does not execute all commands correctly.

SOLUTION

Make sure that the batteries are inserted correctly, or substitute them with 2 new 1.5V alkaline AAA/LR03 batteries.

Make sure that the batteries are new and that the remote control is pointing at the device without any obstacles between them.
If necessary, enter the remote control code again by repeating the programming procedure.

Substitute the batteries, which are about to go flat.

You may be using the wrong code.
Enter the remote control settings again by repeating the programming procedure.

INFO-LINE

If you have any questions about the new Speedy 210 combo remote control:

- carefully read this Instructions Booklet which will allow you to solve most problems
- consult our website www.meliconi.com where you will find the answers you need in the fastest, easiest way.

2 year WARRANTY

The warranty is voided if the product is tampered with or used improperly.

Retailer stamp

Remote control model **Speedy 210 combo**

Purchase date / /



The symbol showing a wheeled bin with a cross through it which appears on the device indicates that at the end of its useful life the product must be collected separately from other waste. Therefore, at the end of the device's life, you must take it to appropriate centres for the differentiated collection of electrical and electronic waste, or return it to the retailer when purchasing a new device of equivalent type, on a one-for-one basis. Suitable differentiated collection to allow subsequent recycling of the decommissioned device, with environmentally-compatible treatment and disposal, help to prevent any negative effects on the environment and health and to promote the recycling of the materials of which the device is made. Improper disposal of the product by the user will be subject to the sanctions in Legislative Decree No. 22/1997 (article 50 and subsequent articles of Legislative Decree No. 22/1997).